



REF. NO.	SKU	DESCRIPTION
001	TRA067	SCREW MOTOR TOP COVER
002	TRA007	MOTOR TOP COVER
003	TRA027	SPEED CONTROLLER
004	TRC057	POWER CORD
005	TRA068	COPPER RING B (BRUSH CONNECTION B)
006	TRA069	COPPER RING A (BRUSH CONNECTION A)
007	TRA018	CORD GUARD
008-010	TRA136	RACK POST GUIDE ASSEMBLY
011	TRA071	SCREW UPPER ARMATURE BEALT
012	TRA016	UPPER ARMATURE BEARING PLATE
013	TRA017	CORD RESTRAIN
014	TRA072	SCREW CORD RESTRAINT
015-018, 020 & 023	TRA135	SWITCH ASSEMBLY
019	TRA034	DEPTH STOP SPRING GUIDE
021	TRA074	SCREW CORD RESTRAIN
022	TRA075	SCREW SWITCH COVER
024	TRA077	BROWN CONNECT WIRE
025	TRA078	BLUE CONNECT WIRE
026	TRA079	SET SCREW
027	TRA056	HOLDER BRUSH
028	TRA055	BRUSH
029	TRA080	CAP BRUSH
030	TRA081	PAN HD SCREW
031	TRA035	MICRO ADJUST KNOB
032	TRA005	UPPER MOTOR BODY
033	TRA003	FIELD COIL
034	TRA036-3	WORM GEAR (START 2010)
034.2	TRA501	PIN
034.3	TRA502	O-TYPE RING
034.4	TRA503	FLAT WASHER
034.5	TRA504	E RING
035	TRA082	SELF-TAP PAN HD SCREW/WASHER
036-037	TRA127	MAGNET RING & MOUNT ASSEMBLY
038	TRA085	BALL BEARING
039	TRA002	ARMATURE ASSEMBLY
040	TRA024	FAN SHROUD
041	TRA086	SCREW LOWER ARMATURE BEALT
042	TRA015	LOWER ARMATURE BEARING PLATE
043	TRA014	BALL BEARING
044	TRA087	E-RING (ETW)
045	TRA044	PLUNGE HANDLE CLUTCH
046	TRA043	PLUNGE HANDLE PINION
047	TRA037	WORM WHEEL METRIC CW DOWN
048	TRA152	SPRING PLUNGE HANDLE CLUTCH SHAFT
049	TRA150	PLUNGE HANDLE CLUTCH SHAFT
050	TRA139	PLUNGE HANDLE OUTER RUBBERISED (FOR PUSH BUTTON HANDLE)
051	TRA147	PLUNGE HANDLE SHAFT
051.1	TRA141	PLUNGE SELECT PUSH BUTTON
051.2	TRA142	PLUNGE SELECT BUTTON SPRING
051.3	TRA143	SELF TAPPING SCREW
051.4	TRA144	PLUNGE HANDLE ROTOR
051.5	TRA145	PLUNGE HANDLE STATOR
051.6	TRA146	PLUNGE HANDLE LOCKOUT
051.7	TRA149	PIN
051.8	TRA151	SPRING PLUNGE HANDLE ROTOR
052	TRA140	PLUNGE HANDLE INNER
053	TRA089	SCREW CORD RESTRAINT
054	TRA090	SPRING RELEASE RING
055	TRA148	MICRO RELEASE RING

REF. NO.	SKU	DESCRIPTION
057, 058 & 076	TRA052	LOWER MOTOR BODY & BUSH ASSEMBLY
059	TRA092	SPRING DEPTH STOP ROD
060	TRA033	DEPTH STOP ROD
061	TRA058	DEPTH STOP ROD PLUG
062	TRA046	FIXED HANDLE INNER (FOR PUSH BUTTON HANDLE)
063	TRA093	PAN HD SCREW
064	TRA045	FIXED HANDLE OUTER RUBBERISED (FOR PUSH BUTTON HANDLE)
065	TRA094	SELF TAPPING SCREW
066	TRA032	DEPTH STOP BRASS PLUG
067	TRA133	DEPTH SPRING
068-070	TRA134	DEPTH KNOB ASSEMBLY
071	TRA049	PLUNGE LOCK BOLT
072	TRA098	SCREW PLUNGE LOCK BOLT PLATE
073	TRA050	PLUNGE LOCK BOLT PLATE
074	TRA048	PLUNGE LOCK LEVER
075	TRA099	SCREW PLUNGE LOCK BOLT
077	TRA101	SELF-TAP PAN HD SCREW
078	TRA317A	COLLET SHAFT
079	TRA104	INNER SPRING SHAFT LOCK
080	TRA026	SHAFT LOCK PIN
081	TRA105	SPRING SHAFT LOCK BUTTON
082	TRA025	SHAFT LOCK BUTTON
083	TRA106	SCREW SHAFT LOCK BUTTON
084	TRA107	PAN HD SCREW
085	TRA022	REAR CHIP SHIELD
086	TRA108	RACK POST LINER
087	TRA109	RETAIN RING
088	TRA110	SPRING RACK POST
091	TRA064	FENCE ATTACHMENT KONB
092	TRA111	SPRING FENCE ATTACHMENT KNOB
093	TRA021	FRONT CHIP SHIELD
094	TRA023	VACUUM SHIELD BIG THROAT
095	TRA030	TURRET WHEEL
096	TRA112	NUT, TURRET WHEEL
097	TRA028	TURRET
098	TRA113	SCREW, TURRET WHEEL
099	TRA114	SPRING FENCE ATTACHMENT KNOB
100	TRA029	TURRET DETENT BALL
089, 090, 101, 103	TRA125	BASE & POST ASSEMBLY
102	TRA115	SELF TAPPING SCREW
104	TRA009	BASE PLATE
105	TRA117	M6X40MM COACH BOLT
106	TRA118	SCREW
107-111	TRA128	FENCE PLATE & CIRCLE CUTTER ASSEMBLY
112-116	TRA126	FENCE ASSEMBLY
119	TRA066	WRENCH
120		WASHER
124-130	TRA410	COMPLETE WINDER HANDLE ASSEMBLY
131		12MM COLLET ASSEMBLY
132		8MM COLLET ASSEMBLY
133		WASHER
150		COPPER PAD
151		SCREW 1/4" X 7/8" FOR ROUTER TABLE